

MATCH on STREX

INSTALLATION INSTRUCTIONS | APRIL 2023

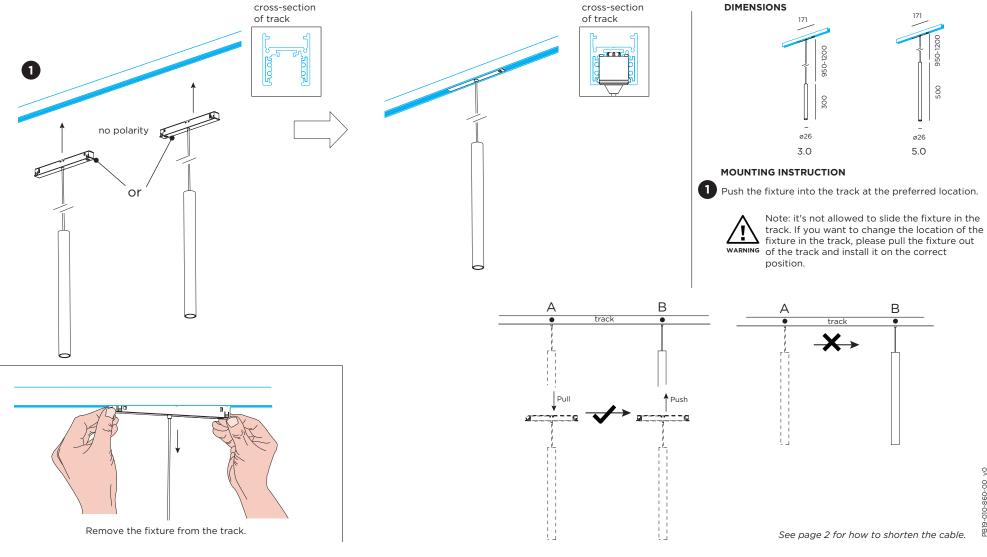

MATCH on STREX


INSTALLATION INSTRUCTIONS | APRIL 2023

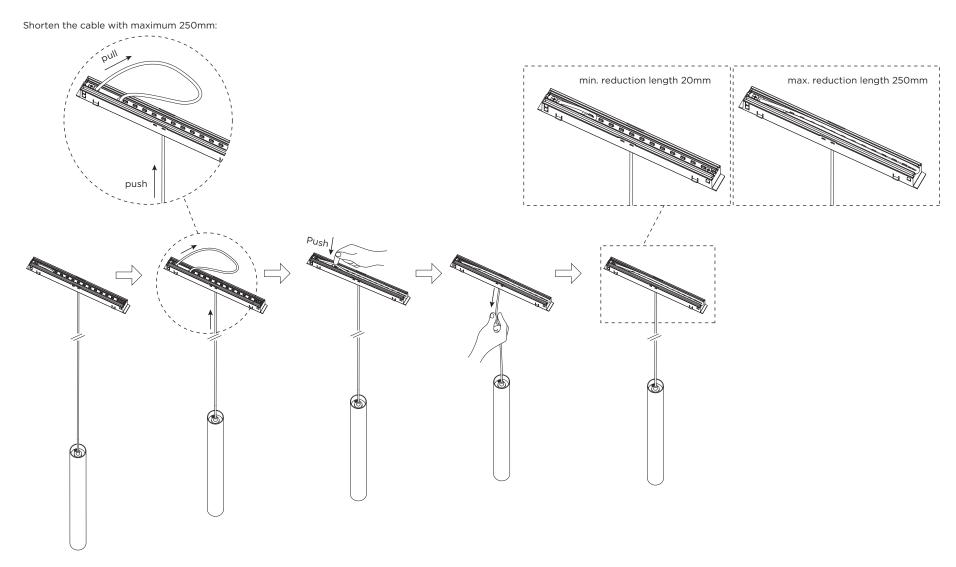



MATCH on STREX

INSTALLATION INSTRUCTIONS | APRIL 2023

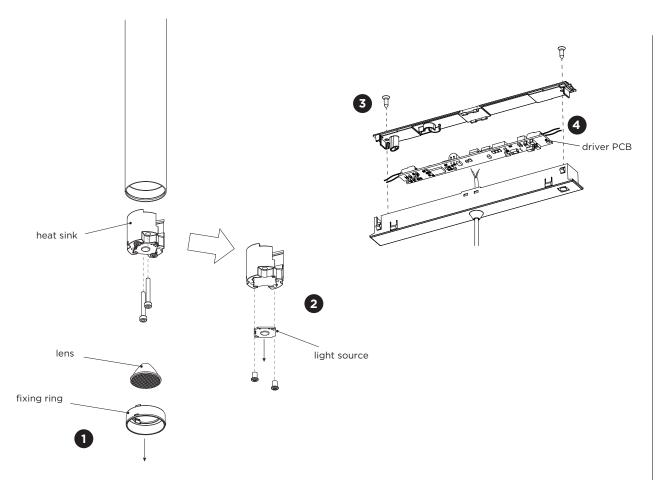



DISMOUNTING AND RECYCLING INSTRUCTIONS

Light source & driver

- 1 Pull out the fixing ring, remove the lens and unscrew the heat sink.
- Unscrew the screws on the heat sink, disconnect the wires and remove the light source.
- Unscrew the top screws and remove the lid.
- Disconnect the wires and remove the driver PCB.



The driver is replaceable by an authorized professional.

For advice contact your Wever & Ducré customer service contact point.



The light source is replaceable by an authorized professional.

For advice contact your Wever & Ducré customer service contact point.



This luminaire contains a light source with the energy class E.