

INSTALLATION INSTRUCTIONS | OCTOBER 2024

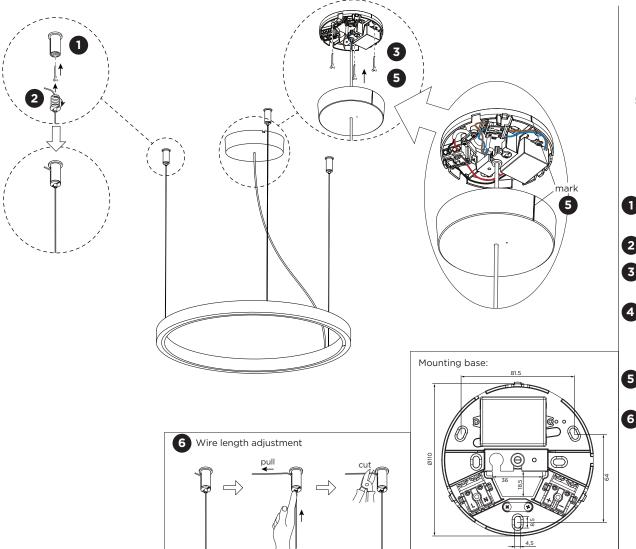

WEVER & DUCRÉ LIGHTING

 
DIMENSIONS

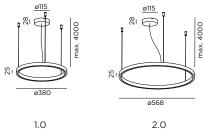

MOUNTING INSTRUCTION


- 1 Screw out the top pieces of the cable holders and fix them on the ceiling with screws (screws are not included).
- 2 Screw the cable holders back to the top piece.
- 3 Remove the cover of the mounting base by pulling and mount the base on the ceiling with screws (screws are not included).
- POWER CONNECTION

Connect to 220-240V




- 5 Align the marks on both of the mounting base and the cover. Push the cover on the mounting base untill it clicks.
- 6 Adjust the wires to the required length.

INSTALLATION INSTRUCTIONS | OCTOBER 2024

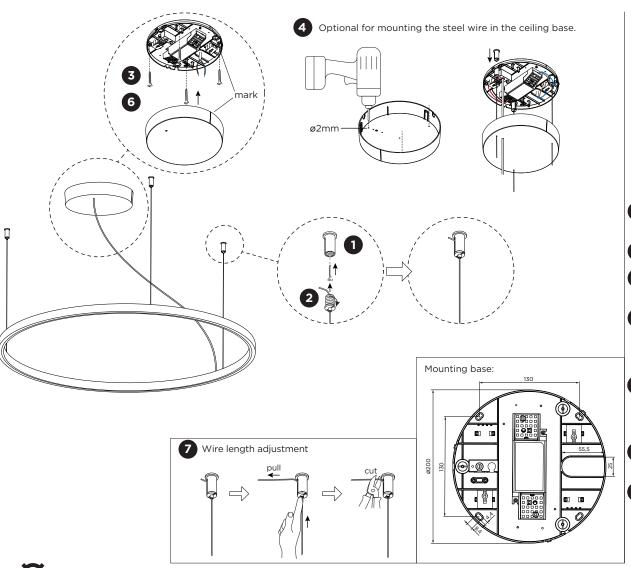

DIMENSIONS

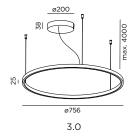




MOUNTING INSTRUCTION

- Screw out the top pieces of the cable holders and fix them on the ceiling with screws (screws are not included).
- 2 Screw the cable holders back to the top piece.
- Remove the cover of the mounting base by pulling and mount the base on the ceiling with screws (screws are not included).
- 4 Optional for 3.0: for mounting the steel wire in the ceiling base, drill three holes in the cover. Mount the wire lockers from the backside of the mounting base before screwing it to the ceiling.


 Pull the steel wires through the wire lockers.
- 5 POWER CONNECTION

 Connect to 220-240V



- 6 Align the marks on both of the mounting base and the cover.
 Push the cover on the mounting base untill it clicks.
- 7 Adjust the wires to the required length.


INSTALLATION INSTRUCTIONS | OCTOBER 2024

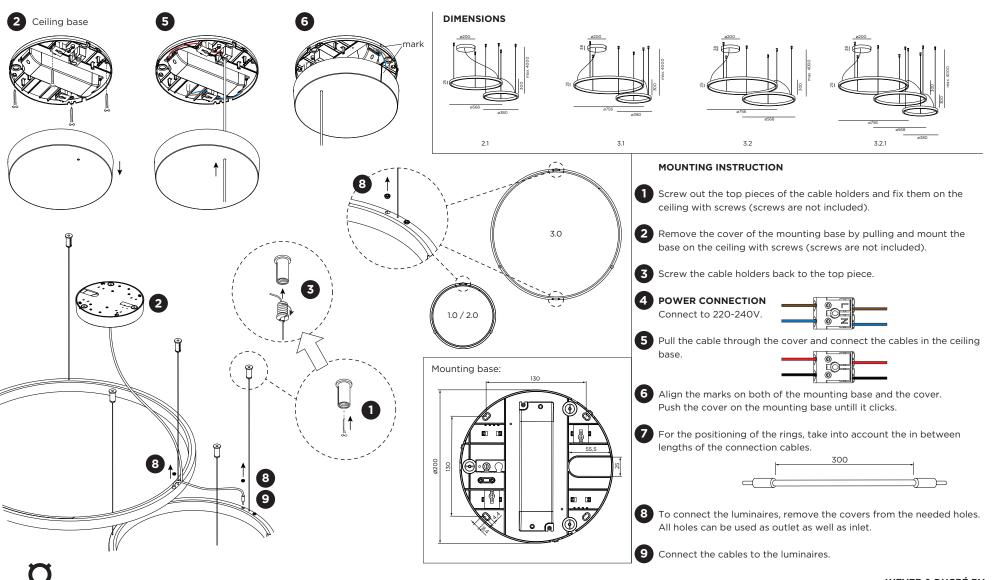



WEVER & DUCRÉ

LIGHTING

INSTALLATION INSTRUCTIONS | OCTOBER 2024

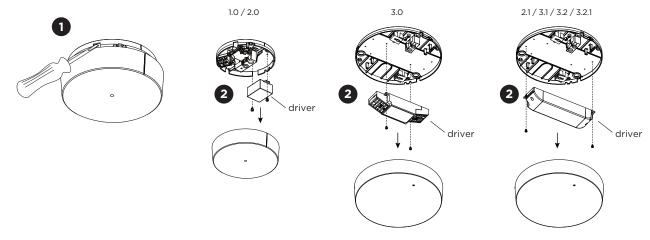

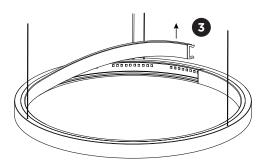

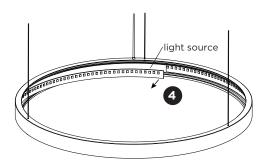



DISMOUNTING AND RECYCLING INSTRUCTIONS

Light source & driver

- Remove the lid from the mounting base by placing a flat tool into the gap and pushing it down.
- 2 Disconnect the wires and unscrew the driver to remove it.
- Remove the silicone cover by pulling it off.
- 4 Pull out the light source to remove it.



The light source is replaceable by Wever & Ducré or by a professional with explicit authorisation. For more information please contact your local Wever & Ducré customer service point.



The driver can be replaced by the end user.



This luminaire contains a light source with the energy class E.